

### Manual Trigger

Push the trigger button to start reading, release the trigger button to end reading



Manual Trigger Mode

### Continuous Scanning Mode

Scan below QR code, the scanner becomes continuous scanning mode to work , no need manual trigger operating



Continuous Scanning Mode

### **Auto-sensing Mode**

Scan below QR code, the scanner enters into auto-sensing mode.



Auto-sensing