

Enable reverse code reading

You can find the EW3410 version in the codebar of the product box

ONLY EW3410 R1

In some special application scenarios, it is necessary to read special barcodes with black and white reversed phase. Users can enable/disable the reading function of inverted barcodes by reading the following setting codes.



**Disable Reading Reverse Barcodes



Enable reading

ONLY EW3410



*Disable Reading Reverse 1D barcode



Enable Reading Reverse 1D barcode



*Disable Reading Reverse 2D barcode



Enable Reading Reverse 1D barcode